INSTALLATION GUIDE

REMOTE CONTROL SOFTWARE

RS-91

System requirements To use this software, the following environment is required:

PC

- Microsoft[®] Windows[®] 98/98SE/Me/2000/XP or Microsoft[®] Windows Vista[™] is installed
- With RS-232C serial port (D-sub 9-pin)

Others

• Data communication cable, OPC-1529R (supplied)

Supplied items

The following items are supplied with the RS-91.

- Qtv. Application CD1 Data communication cable (OPC-1529R)1
- Install guide (this instruction leaflet)

Screen description



1 MENU BAR

Click one of [File], [View], [Option] or [Help] then select the desired item for the software basic operation or condition setting, etc.

ØSHORT CUT BUTTONS

Click one of five short cut buttons to open the previously saved data, save the current settings, re-read the data from the transceiver, display memory channel list or set mode screen.

G<MENU> BUTTON

Click then select to display one of Common, A band, B band and Digital setting screen.

Getting started

- This remote control software is designed to remotely controls the IC-91A/AD or IC-E91/D VHF/UHF FM TRANSCEIVER.
- ♦ HELP WINDOW: RS-91 has a help window to describe functions and operation.

Connections

Connect the transceiver to your PC using the supplied data communication cable, OPC-1529R, as illustrated below.



@<MAIN> BUTTON

Click to select the main band.

G<PWR> BUTTON

Click to turn the transceiver's power ON and OFF.

G<DUAL> BUTTON

Click to toggle the dualwatch operation ON and OFF.

7 Function buttons for general operation Click to activate the appropriate functions.

③Function buttons for DV mode operations Click to activate the appropriate functions for DV mode.

*Functions only when optional UT-121 DIGITAL UNIT is installed into the IC-91A or IC-E91.

G<F.INP> BUTTON

Click to toggle the Keypad screen indication ON and OFF.

(CALL> BUTTON

Click to select call channel mode.

Content of the second secon

Click to select memory channel mode.

VFO> BUTTON

Click to select VFO mode.

B<DIAL>

Click to tune the operating frequency, or select the memory channel.

VOL>

Click to adjust audio output level. Left click: decrease, Right click: increase

NOTE: The above instructions are for reference only Please refer to the HELP file of the REMOTE CONTROL SOFTWARE for the operation details. To refering the HELP file, Internet Explorer 5.0 or later is required.

Icom, Icom Inc. and the COM logo are registered trademarks of Icom Incorporated (Japan) in the United States, the United Kingdom, Germany, France, Spain, Russia and/or other countries

Microsoft, Windows and Windows Vista are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries All other products or brands are registered trademarks or trademarks of their respective holders.

Software installation

- 1) Quit all applications when Windows is running
- . Log in as the administrator, when Windows 2000/XP or Windows Vista installed PC is used.
- 2 Insert the CD into the appropriate CD drive.
- (3) Double-click the "Setup.exe" contained in the CD. · Click [Continue] in "User Account Control" dialog when installing the driver into Windows Vista PC.
- (4) The "Choose Setup Language" will appear as below. Click $[\mathbf{V}]$ to select the desired setup language from "English" and "Japanese," then click [OK].



5 The "Welcome to the InstallShield Wizard for RS-91" will appear as below. Click [Next>]



- 6 The "User Information" will appear as below, then type your name, your company name and the product ID number with the following manner. Then click [Next >].
- ID number: 290201-(6 digit serial number)
- e.g. the serial number on the CD is 000001, enter "290201-000001" as the ID number.



(7) The "Choose Destination Location" will appear as below. Then click [Next>] to install the software to the destination folder. (e.g. C:\Program Files\Icom\RS-91)

• Click [Browse] to	select another	destination	folder	before
clicking [<u>N</u> ext >], if de	sired.			

S-91 Setup			le l
Choose Destination Location Select folder where Setup will install files.			
Setup will install RS-91 in the following folder	r.		
To install to this folder, click Next. To install t another folder.	o a different folder,	click Browse	and select
Destination Folder			
E:\Program Files\Icom\RS-91			Browse
stallShield		Click	
			_

(8) After the installation is completed, the "InstallShield Wizard Complete" will appear as below. Then click [Finish].



(9) Eiect the CD.

1 Program group 'RS-91' appears in the 'Programs' folder of the start menu, and 'RS-91' short cut icon appears on the desktop screen.

♦ COM port setting

COM port setting may be required when start up the RS-91 first time, or the data communication cable connecting port is changed.

Click "COM Port..." in [Option] menu then set the appropriate COM port number that the data communication is connected.



RS-91

■ 動作環境

RS-91をご使用になるには、次の動作環境が必要です。 ・対応OS : 日本語 Microsoft® Windows® 98/98SE/Me/2000/XP、 Windows Vista™ ・ポート : RS-232C(D-sub 9ピン) ・データ通信ケーブル : OPC-1529(RS-91に同梱)

■ 同梱品

RS-91には、以下を同梱しています。





●メニューバー

[ファイル]、[表示]、[オプション]、[ヘルプ]メニュー から、このソフトウェアの基本的な操作や設定などをし ます。

❷ ツールバー

「開く」、「上書き保存」、「本体からメモリー読み直し」、 「メモリーチャンネル編集」、「セットモード編集」のボ タンです。

③ ⟨MENU⟩ボタン

クリックすると、共通、Aバンド、Bバンド、またはデジ タル設定画面を選択して表示します。 本書は、リモートコントロールソフトウェア(RS-91) の取扱説明書です。 RS-91は、ID-91(VHF/UHFデジタルトランシーバ ー)をパソコンから操作するためのプログラムです。

■ パソコンへの接続

データ通信ケーブル(OPC-1529)を使用して、ID-91の [DATA]ジャックとパソコンのRS-232Cコネクターに接 続します。



- ④ 〈MAIN〉ボタン
- MAINバンドを切り替えるボタンです。
- ⑤ ⟨PWR⟩ボタン 接続しているID-91の電源を「ON/OFF」します。
- ⑥ 〈DUAL〉ボタン
 デュアルワッチ機能を「ON/OFF」します。
- 機能ボタン
 各種機能ボタンです。
- BVモード用機能ボタン
 DVモードで使用する各種機能ボタンです。
- ⟨F.INP⟩ボタン

 クリックすると、テンキー画面表示を「ON/OFF」します。
- **① 〈CALL〉ボタン** コールチャンネルを選択します。
- (MR)ボタン
 メモリーモードを選択します。
- ② 〈VFO〉ボタン
 VFOモードを選択します。

🚯 〈DIAL〉ボタン

クリックすると、運用周波数やメモリーチャンネルを選 択します。

🕑 〈VOL〉ボタン

音量を調整します。 右クリックで音量が大きくなり、左クリックで音量が小 さくなります。

【ご注意】

設定できる項目や、その項目についての詳細は、リモートコントロールソフトウェア(RS-91)のヘルプをご覧ください。なお、ヘルプをご覧いただくには、Internet Explorer5.5以降のバージョンが必要です。

■ インストールのしかた

- Microsoft[®] Windows[®]を起動します。
 ※Windows 2000/XP、Windows Vistaの場合は、
- 管理者権限でログオンしてください。 ※ほかのアプリケーションを起動しているときは、すべて終了してください。
- ② リモートコントロールソフトウェア(RS-91)のCDを CDドライブにセットします。
- ③ CDに格納されている「Setup.exe」ファイルをダブル クリックしてください。
 - ※Windows Vistaの場合、[ユーザーアカウント制御] 画面を表示しますので、〈続行〉をクリックしてくだ さい。
- ④ [設定言語の選択]画面を表示しますので、ソフトの表示 言語を「日本語」、または「英語」から選択して、〈OK〉を クリックします。



 [RS-91用のInstallShieldウィザードへようこそ]画面 を表示しますので、〈次へ (N)>〉をクリックします。



 ⑥ [ユーザ情報]画面を表示しますので、ユーザ名、会社名 とシリアル番号を入力して、〈次へ (<u>N</u>)>〉をクリック します。

[シリアル番号]は、【290201-(CDのシリアル番号)】で 構成されており、CDのシリアル番号が「000001」のと きの入力例は以下のようになります。 入力例:290201-000001



< 戻る(B) 次へ(N)> キャンセル

アイコム株式会社 547-0003 大阪市平野区加美南1-1-32 ⑦[インストール先の選択]画面を表示しますので、画面内に表示されている場所にインストールするときは、〈次へ(N)>〉をクリックします。

※インストール先を変更したいときは、〈参照(<u>R</u>)…〉を クリックして、インストール先を指定します。



 ⑧ インストール完了後、[InstallShieldウィザードの完了)画面を表示しますので、〈完了〉をクリックします。



- 9 CDを取り出します。
- ・ (スタート)メニューのプログラムフォルダー内に 「RS-91」プログラムグループが表示され、デスクトップ 上にショートカットアイコンが生成されます。
- ※アンインストールする場合は、Microsoft® Windows® のコントロールパネル内の「アプリケーションの追加と 削除」から行ってください。

◇ COMポートの設定について

RS-91を初めて起動するとき、またはデータ通信ケーブルの接続ポートを変更したときは、COMポートの設定が必要です。

[オプション]メニューから、COMポート(C)を選択して、 データ通信ケーブルを接続しているポート番号を設定し てください。

■ 登録商標について

アイコム株式会社、アイコム、Icom Inc.、Comは、アイコム株式会社の登録商標です。

Microsoft、Windows、Windows Vistaは、米国Microsoft Corporationの米国およびその他の国における登録商標または 商標です。

その他、本書に記載されている会社名、製品名は、各社の商標および登録商標です。