




VHF/UHF ALL MODE TRANSCEIVER

IC-910H

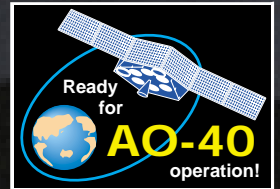

The New Dimension in the VHF/UHF World!

100W of stable output power

A powerful 100W* of output power is provided by the newly designed power amplifier circuit, which employs bipolar transistors in parallel. The combination of the aluminum die-cast chassis and effective cooling fan ensures stable output for continuous operation.

* 75W on 430MHz band and 10W on 1200MHz band

High performance receiver

The IC-910H offers 0.11 μ V of high sensitivity (at 10db S/N on SSB, CW mode), while the image and spurious responses are minimized for good signal fidelity. Used with the optional preamplifiers for each band, indispensable for obtaining weak signals in DX or satellite communication, you will experience top class receiving characteristics in the VHF/UHF bands.

Ready-to-install 1200MHz BAND UNIT

By installing the optional UX-910 1200MHz BAND UNIT, the IC-910H becomes an all mode tri-band transceiver. You can also enjoy cross band and full duplex operation. Measuring only 241(W) \times 94(H) \times 239(D) mm, and weighting 4.5kg (without UX-910)*, its compactness and light weight is convenient for field operation.

*approx; 9 $\frac{1}{2}$ (W) \times 3 $\frac{11}{16}$ (H) \times 9 $\frac{13}{32}$ (D) in.; 9 $\frac{29}{32}$ lb

9600bps packet operation

The IC-910H has two data sockets for simultaneous two band packet communications. Setting of the packet communication can be made easily in the set mode.

AO-40 satellite communication

The optional AG-2400 converts a 2.4GHz satellite downlink signal to a 144MHz signal. Coupled with the satellite mode of the IC-910H, the US mode and LS (UX-910 required) mode satellite operation ready for use. Down-to-earth satellite operation in your shack!

And more

- All receiver functions, including IF shift, sweep, noise blanker, RF attenuator, also work in the SUB band
- The sweep function observes conditions around the set frequency
- 4 types of scanning are activated on each band independently
- The memory pad stores the operating frequencies and modes temporarily
- Electronic keyer with a dot/dash ratio control is built-in
- FM-narrow mode receivable (except 1200MHz band)
- 50 CTCSS tone encoder/decoder and one touch repeater function
- Optional UT-106 DSP UNIT available
- CI-V capability for PC control

Icom Inc.

SPECIFICATIONS

GENERAL

• Frequency coverage : (Unit: MHz)

| Version | 144MHz band | 430MHz band | 1200MHz band** |
|-----------|-------------------------------------|-------------------------------------|--|
| Europe | 144.0-146.0 | 430.0-440.0 | 1240.0-1300.0 |
| U.S.A. | Tx: 144.0-148.0 Rx: 136.0-174.0* | Tx: 430.0-450.0 Rx: 420.0-480.0* | Tx: 1240.0-1300.0 Rx: 1240.0-1320.0 |
| Australia | 144.0-148.0 | 430.0-440.0 | 1240.0-1300.0 |
| Sweden | 144.0-146.0 | 432.0-438.0 | 1240.0-1300.0 |
| Italia | 144.0-146.0 | 430.0-434.0, 435.0-438.0 | 1240.0-1300.0 |

* Guaranteed range: 144.0-148.0MHz; 430-450MHz

- Mode : SSB, CW, FM, FM-N**
- Frequency stability : ±3ppm (-10°C to +60°C)
- Frequency resolution : SSB, CW 1Hz
FM 100Hz
- No. of memory channels : 328** (99 regular, 1 call, 6 scan edges for each band plus 10 satellite memories)
- Operating temperature range : -10°C to +60°C ; +14°F to +140°F
- Power supply requirement : 13.8V DC ±15% (negative ground)
- Current drain (at 13.8 V DC) :
 Transmit high 23.0A (8.0A at 1200MHz band**)
 low 7.0A (4.5A at 1200MHz band**)
 Receive max.audio 2.5A (3.5A at 1200MHz band**)
 stand-by 2.0A (3.0A at 1200MHz band**)
- Dimensions (projections not incl.) : 241(W)×94(H)×239(D) mm ; 9½(W)×3⅞(H)×9⅓(D) in.
- Weight (approx.) : IC-910H 4.5kg ; 9²⁹/₃₂lb
 UX-910 0.85kg ; 1⅞lb
- Antenna connector : VHF SO-239 (50Ω)
 UHF Type-N (50Ω)

TRANSMITTER

- Output power : 144MHz band 5.0-100W
 (continuously adjustable) 430MHz band 5.0-75W
 1200MHz band** 1.0-10W
- Modulation system : SSB Balanced modulation
 FM Variable reactance modulation
- Spurious emission : 144, 430MHz band Less than -60dB
 1200MHz band** Less than -50dB
- Carrier suppression : More than 40dB
- Unwanted sideband : More than 40dB
- Microphone connector : 8-pin connector (600Ω)

RECEIVER

- Receiver system : VHF SSB, CW Single conversion superheterodyne
 FM Double conversion superheterodyne
 UHF SSB, CW Double conversion superheterodyne
 FM Triple conversion superheterodyne

• Intermediate frequencies : (Unit: MHz)

| | Mode | MAIN band | | | SUB band | | |
|----------------|------|-----------|---------|--------|----------|---------|--------|
| | | 1st | 2nd | 3rd | 1st | 2nd | 3rd |
| 144MHz band | SSB | 10.8500 | - | - | 10.9500 | - | - |
| | CW | 10.8491 | - | - | 10.9491 | - | - |
| | FM | 10.8500 | 0.4550 | - | 10.9500 | 0.4550 | - |
| 430MHz band | SSB | 71.2500 | 10.8500 | - | 71.3500 | 10.9500 | - |
| | CW | 71.2491 | 10.8491 | - | 71.3491 | 10.9491 | - |
| | FM | 71.2500 | 10.8500 | 0.4550 | 71.3500 | 10.9500 | 0.4550 |
| 1200MHz band** | SSB | 243.8500 | 10.8500 | - | 243.9500 | 10.9500 | - |
| | CW | 243.8491 | 10.8491 | - | 243.9491 | 10.9491 | - |
| | FM | 243.8500 | 10.8500 | 0.4550 | 243.9500 | 10.9500 | 0.4550 |

- Sensitivity : SSB, CW 0.11µV (at 10dB S/N)
 FM 0.18µV (at 12dB SINAD)
- Squelch sensitivity : SSB, CW 1.00µV (at threshold)
 FM 0.18µV (at threshold)
- Selectivity :
 SSB, CW More than 2.3kHz/-6dB Less than 4.2kHz/-60dB
 FM More than 15.0kHz/-6dB Less than 30kHz/-60dB
 FM-N** More than 6.0kHz/-6dB Less than 18kHz/-60dB
- Spurious rejection ratio : More than 60dB (Except 1200MHz band**)
- Audio output power (at 13.8V DC) : More than 2.0W at 10% distortion with an 8Ω load
- RIT variable range : SSB, CW 1.0kHz (2.0kHz at 1200MHz band**)
 FM 5.0kHz (10.0kHz at 1200MHz band**)
- External speaker connector : 2-conductor 3.5mm (1/8") 8Ω connector × 2
 (for MAIN and SUB bands)

* An optional UX-910 1200MHz BAND UNIT is required for 1200MHz operation.

** FM-N is not available in 1200MHz band.

Supplied Accessories

- DC power cable
- Hand microphone (HM-12)
- Spare fuses

All stated specifications are subject to change without notice or obligation.

OPTIONS

■ PREAMPLIFIERS AND DOWN CONVERTER

• AG-25/AG-35/AG-1200 WEATHERPROOF PRE-AMPLIFIERS

External all-weather, mast-mounting preamplifier for compensating for coaxial cable loss. (Not available for EU countries)
 AG-25: 144MHz band; AG-35: 430MHz band; AG-1200: 1200MHz band.

• AG-2400 DOWN CONVERTER

All-weather, satellite down converter with superior NF and gain.
 Input frequency : 2400-2402MHz, Output frequency : 144-146MHz
 Conversion gain: More than 25dB Total NF: Less than 1.5dB

■ INTERNAL UNITS AND FILTERS

• FL-132/FL-133 CW NARROW FILTERS

FL-132 is for the main band; FL-133 is for the sub band operation.

Center freq.: 10.8491MHz (FL-132); 10.9491MHz (FL-133)
 Passband width: 500Hz/-6dB

• CR-293 HIGH STABILITY CRYSTAL UNIT

Frequency stability: ±0.5ppm at 0°C to +60°C.

• UT-102 VOICE SYNTHESIZER UNIT

Provides audible confirmation of frequency and mode with a clear, electronically-generated voice.

• UT-106 DSP UNIT

Provides AF DSP functions, such as noise reduction and auto notch. When 2 units are installed, the DSP function works for MAIN/SUB band simultaneously.

• UX-910 1200MHz BAND UNIT

Allows you additional all-mode operation on the 1200MHz band.

■ MICROPHONES AND SPEAKER

- HM-12 HAND MICROPHONE
- SM-20 DESKTOP MICROPHONE
- SP-7 EXTERNAL SPEAKER (8Ω/5W)

■ OTHERS

- CT-17 CI-V LEVEL CONVERTER
- IC-MB5 MOBILE MOUNTING BRACKET
- MB-23 CARRYING HANDLE
- PS-125 DC POWER SUPPLY (13.8V/25A)

AG-2400



CR-293



UT-106



UX-910



SM-20



PS-125



Icom Inc.

1-1-32, Kamiminami, Hirano-ku, Osaka 547-0003, Japan Phone: 06 6793 5302 Fax: 06 6793 0013 URL: <http://www.icom.co.jp/world/index.html>

Count on us!

Icom America Inc.

<Corporate Headquarters>
 2380 116th Avenue N.E., Bellevue, WA 98004, U.S.A.
 Phone: (425) 454-8155 Fax: (425) 454-1509
 URL : <http://www.icomamerica.com>
 <Customer Service> Phone : (425) 454-7619

Icom Canada

Glenwood Centre #150-6165 Highway 17,
 Delta, B.C., V4K 5B8, Canada
 Phone: (604) 952-4266 Fax: (604) 952-0090
 URL : <http://www.icomcanada.com>

Icom (Australia) Pty. Ltd.

A.B.N. 88 006 092 575
 290-294 Albert Street, Brunswick, Victoria, 3056, Australia
 Phone: 03 9387 0666 Fax: 03 9387 0022
 URL : <http://www.icom.net.au>

Icom New Zealand

146A Harris Road, East Tamaki, Auckland, New Zealand
 Phone: 09 274 4062 Fax: 09 274 4708
 URL : <http://www.icom.co.nz>

Icom (Europe) GmbH

Communication Equipment
 Himmelgeister Str. 100, D-40225 Düsseldorf, Germany
 Phone: 0211 346047 Fax: 0211 333639
 URL : <http://www.icomeurope.com>

Icom Spain S.L.

Ctra. de Gracia a Manresa Km. 14,750
 08190 Sant Cugat del Valles Barcelona, SPAIN
 Phone: (93) 590 26 70 Fax: (93) 589 04 46
 URL : <http://www.icomspain.com>

Icom (UK) Ltd.

Unit 9, Sea St., Herne Bay, Kent, CT6 8LD, U.K.
 Phone: 01227 741741 Fax: 01227 741742
 URL : <http://www.icomuk.co.uk>

Icom France S.a

Zac de la Plaine, Rue Brindejone des Moulinais
 BP 5804, 31505 Toulouse Cedex, France
 Phone: 561 36 03 03 Fax: 561 36 03 00
 URL : <http://www.icom-france.com>

Asia Icom Inc.

6F No. 68, Sec. 1 Cheng-Teh Road,
 Taipei, Taiwan, R.O.C.
 Phone: (02) 2559 1899 Fax: (02) 2559 1874
 URL : <http://www.asia-icom.com>

Your local distributor/dealer:



Certificate Number Q14190

Icom Inc. (Japan), is an ISO9001 certification acquired company.