## O ICOM

**COMMUNICATIONS RECEIVER** 

# IC-R8600

## HIGH PERFORMANCE SOFTWARE DEFINED RECEIVER



# Exciting Innovation in the Professional Communications Receiver World

The IC-R8600 is a super wideband 10 kHz to 3 GHz communication receiver that enables you to hear and see a wide variety of signals in various ways. Not only does it decode diverse digital communication signals, but the advanced FPGA processing technologies implemented provide clarity and accuracy of received signals. With the optional remote control software for a Windows<sup>®</sup> PC, received audio and spectrum scope data can be transferred through an IP network for monitoring from remote locations.

### **Superior Performance**

#### 10 kHz to 3 GHz Super Wideband Coverage

The IC-R8600 decodes various digital protocol signals including P25 (Phase 1), NXDN™, dPMR™, D-STAR, Japanese DCR (Digital Convenience Radio) as well as receives conventional analog signals such as USB, LSB, FSK, CW, AM, S-AM (Synchronous-AM), FM and WFM modes, covering 10 kHz to 3 GHz wideband in 1 Hz steps.

#### Absolute Value of RSSI (Received Signal Strength Indicator)


The IC-R8600 shows S-meter, dBµ, dBµ (emf) and dBm meter types in the RSSI. The dBµ, dBµ (emf) and dBm meter has a high ±3 dB accuracy\* (between 0.5-1100 MHz) that can be used for measuring signal strength level.

\* Less than ±6 dB between 1100-3000 MHz

### -62.8 dBm 52.6 dBy 31.9 dBu E

#### Software Demodulation in FPGA Processing

The IC-R8600 utilizes FPGA (Field Programmable Gate Array) and DSP units for demodulation, decoding and most of signal processing. Direct HF signals and intermediate frequency signals, which are converted from VHF/UHF signals, are digitized in a 14-bit A/D converter and transferred to the FPGA and DSP for optimal processing. The high-rate 122.88 MHz sampling frequency used for the A/D converter results in superior aliasing and image reception reduction.

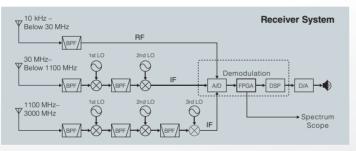

#### Superb Receiver Performance

The IC-R8600 has 11 discrete RF bandpass filters in the HF bands and 13 bandpass filters in the VHF/UHF bands. To prevent overflow, only the intended signal is passed, while any out of range strong interference signals are rejected. The IC-R8600 provides +30 dBm IP3 and 105 dB dynamic range at 14.1 MHz. IP3 performance is +10 dBm at 144 MHz and 0 dBm at 440 MHz.

#### Ample Memory Channels

The IC-R8600 has up to 2000 regular memory channels assignable to 100 groups. In addition to the regular memory channels, up to 100 scan skip channels and 50 pairs of program scan edges can be set. The auto memory write scan automatically stores busy frequencies in the auto memory write channels (up to 200 channels). These memory channels and various settings can be edited with the optional CS-R8600 programming software on a Windows® PC.

#### Variety of Scan Functions

A variety of scan functions effectively and thoroughly search for desired stations. The IC-R8600 scans up to 100 channels per second in the memory scan mode.

- · Program scan/Fine program scan
- ⊿f scan/⊿f fine scan
- · Priority scan
- Memory scan
- Selected memory scan
- Selected mode memory scan
- Auto memory write scan



#### **ICOM** DIAL C DIAL A 16:20 **D-STAR** FIL3 Hirano 430, JPN ▲GRP V/M POWER 439.390 .**00**0 мемо 45**15** MW VGRP REMOTE LOCAL TS 10k -62.8 dBm RECEIVE LOCK M-CH DIAL SCAN PRIO P.LOCK SPECTRUM SCOPE CENTER Grid 0.5M/10de +2.5M DIAL B TIMER -2.0 0 PHONES < 2 > REF SPEED PEAK EXPD/SET IC-R8600 MENU FUNCTION M.SCOPE SPEECH QUICK EXIT

### **Extensive Rich Features**

#### SD Card Slot for Receiver Recorder

The recorder function can record received audio onto an SD card in WAVE format. The recorded voice audio can be played back on the receiver or a PC. When a 32 GB SD card is used, up to 270 hours of recording is possible. In addition, the screen capture function saves a snap shot of the screen in PNG or BMP format on the SD card. \* An SD card is required separately.

#### Remote Control Function through IP Network or USB Cable

The optional RS-R8600 PC remote control software allows you to listen to received audio and control most of the receiver functions, including the spectrum scope, through an IP network or USB cable.



## COMMUNICATIONS RECEIVER IC-R8600

Actual Size

## **Intuitive Operation**


#### Real-time Spectrum Scope with Waterfall Function

The high-resolution real-time spectrum scope provides class-leading performance in resolution, maximum 30 frames per second\* fast sweep speed, ±2.5 MHz wide scope span (display range) and 110 dB of dynamic range (at ±2.5 kHz span). The waterfall screen allows you to find weak signals by showing the spectrum change over time. When tapping the spectrum scope or waterfall screen, the tapped area can be selected as the operating frequency. The peak search function finds several peak frequencies within the scope range, and helps you to select these. (\* Approximate)

#### Quick, Smooth and Intuitive Operation

To efficiently acquire intended signals, the IC-R8600 user interface provides guick and accurate operation. The large 4.3-inch color display, with touch screen function, is configured to collect operating information. By tapping indications and icons on the screen, the setting menu will pop up and parameters can easily be adjusted. When either the DIAL A, B or C multi-function control knobs is pushed, various functions, such as scan speed, RF gain, audio tone, display backlight or other menus will pop up on the display.







Functions menu for touch screen op

* 👼 0	
August Lands, Screek, MS 4000 August Lands, Screek, MS 400 August Lands,	XO TRIBATE ROTOR WENCER NOTOR TREACER TOW
<u>- 11 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 </u>	111 (MH) (MS) (104)
ACR A 4 94	SCAN A SCAN B
"CW" [ THK"   SATAK [ TAB" ] 1	PHE'] "8206"] "DOR"]

#### I/Q Signal Output

The I/Q signal output function\* allows you to derive digital IF signals from the I/Q output iack. It can be used for analyzing spectrum or decoding signals.

\* This function will be provided with future firmware update. A third-party software may be required separately

#### **Other Features**

 3 antenna connectors: an SO-239 type and a phono (RCA) connector for HF and a type-N connector . Clock and NTP function . Center tuning meter and digital auto frequency control (AFC) for FM, WFM and digital modes . Voice synthesizer function • Audio tone functions: HPE/LPE bass treble and de-emphasis . Decode multiple digital code used in digital mode • IP+ function improves 3rd order intercept point performance • Main dial friction adjustment • Dial lock and panel lock • CI-V remote control commands



### **SPECIFICATIONS**

GENERAL						
Frequency coverage	USA	0.010000-821.999999*, 851.000000-866.999999, 896.000000-3000.000000 MHz (*Guaranteed range: 0.100000-821.999999 MHz)				
	EXP	0.010000–3000.000000 MHz (*Guaranteed range: 0.100000–3000.000000 MHz)				
Antenna connector		ANT 1 (0.01–3000 MHz): Type-N (50 Ω) ANT 2 (0.01–30 MHz): PL-259 (50 Ω) ANT 3 (0.01–30 MHz): RCA (500 Ω)				
Frequency stability		Less than ±0.5 ppm (at 25°C after warm up)				
Mode		USB, LSB, CW, FSK, AM, FM, WFM, Digital (D-STAR, P25 Phase 1, NXDN, dPMR, DCR)				
Number of channels		2000 regular with 100 groups, 200 auto memory write, 100 skip and 100 scan edge channels				
Scan types		Programmed, memory, selected memory, selected mode, auto memory write, priority scan and ⊿f scan				
Power supply requirement		13.8 V DC ±15%				
DC current drain		Stand-by: 1.8 A, Maximum audio: 2.0 A				
Operating temperature range		-10 °C to +60 °C; 14 °F to 140 °F				
Frequency resolution		1 Hz				
Dimensions (W $\times$ H $\times$ D) (projections not included)		220 × 90 × 230 mm; 8.7 × 3.5 × 9.1 in				
Weight (approximately)		4.3 kg; 9.5 lb				

Supplied accessories: (May differ, depending on the receiver version) • DC power cable • Fuses • Plugs

OPTIONS Some options may not be available in some countries. Please ask your dealer for details.





WITH DC POWER SUPPLY High quality audio and matching height Speaker maximum input: 7 W. 8 Q Power supply output: 15 V/2 A



FOLDED DIPOLE ANTENNA

Covers 1.9-30 MHz bands

AH-8000 SUPER WIDEBAND OMNIDIRECTIONAL ANTENNA Frequency coverage: 100–3335 MHz

• MB-123 CARRYING HANDLE

• CS-R8600 PROGRAMMING SOFTWARE for Windows® PC

AH-710

• RS-R8600 REMOTE CONTROL SOFTWARE for Windows® PC

Icom, Icom Inc. and the Icom logo are registered trademarks of Icom Incorporated (Japan) in Japan, the United States, the United Kingdom, Germany, France, Spain, Russia, Australia, New Zealand and/or other countries. NXDN is a trademark of Icom Incorporated and JVC KENWOOD Corporation. dPMR and the dPMR logo are trademarks of the dPMR MoU Association. Windows is either a registered trademark or a trademark of Microsoft Corporation in the United States and/or other countries. All other trademarks are the properties of their respective holders or other countries.

#### Icom America Inc. 12421 Willows Road NE, Kirkland, WA 98034, U.S.A. Phone: +1 (425) 454-8155 Fax: +1 (425) 454-1509

E-mail: sales@icomamerica.com URL: http://www.icomamerica.com

#### Icom Canada

Glenwood Centre #150-6165 Highway 17A, Delta, B.C., V4K 5B8, Canada Phone: +1 (604) 952-4266 Fax: +1 (604) 952-0090 E-mail: info@icomcanada.com URL: http://www.icomcanada.com

#### Icom Brazil

Bua Itororó, 444 Padre Eustáquio Belo Horizonte MG, CEP: 30720-450, Brazil Phone: +55 (31) 3582 8847 Fax: +55 (31) 3582 8987 E-mail: sales@icombrazil.com

#### Icom (Europe) GmbH

Communication Equipment Auf der Krautweide 24 65812 Bad Soden am Taunus, Germany Phone: +49 (6196) 76685-0 Fax: +49 (6196) 76685-50 E-mail: info@icomeurope.com URL: http://www.icomeurope.com

#### Icom Spain S.L.

Ctra. Rubi, No. 88 "Edificio Can Castanyer Bajos A 08174, Sant Cugat del Valles, Barcelona, Spain Phone: +34 (93) 590 26 70 Fax: +34 (93) 589 26 70 Fax: +34 (93) 589 04 46 E-mail: icom@icomspain.com URL: http://www.icomspain.com URL:

#### Icom (UK) Ltd.

Blacksole House, Altira Park Herne Bay, Kent, CT6 6GZ, U.K. Phone: +44 (0) 1227 741741 Fax: +44 (0) 1227 741742 E-mail: info@icomuk.co.uk URL: http://www.icomuk.co.uk

#### Icom France s.a.s.

SP-23 EXTERNAL SPEAKER

4 audio filters: headphone jack.

AD-55NS POWER SUPPLY

Input: 100-240 V/1 A

Output: 15 V/2 A

Input impedance: 8 Ω

Max. input power: 5 W

Zac de la Plaine, 1 Rue Brindejonc des Moulinais, BP 45804, 31505 Toulouse Cedex 5, France Phone: +33 (5) 61 36 03 03 Fax: +33 (5) 61 36 03 00 F-mail: icom@icom-france.com LIRI · http://www.icom-france.com

#### Icom (Australia) Pty. Ltd.

Unit 1 / 103 Garden Road, Clayton, VIC 3168 Australia Phone: +61 (03) 9549 7500 +61 (03) 9549 7505 Fax E-mail: sales@icom.net.au URL: http://www.icom.net.au

#### Asia Icom Inc.

6F No. 68, Sec. 1 Cheng-Teh Road, Taipei, Taiwan, R.O.C. Phone: +886 (02) 2559 1899 Fax: +886 (02) 2559 1874 E-mail: sales@asia-icom.com URL: http://www.asia-icom.com

## IC-R8600

RECEIVER							
Receiver system							
0.010-29.999 MHz	Direct sampling						
30.000-499.999 MHz	Double superheterodyne (IF: 778.7, 46.35 MHz)						
500.000-1099.999 MHz	Double superheterodyne (IF: 278.7, 46.35 MHz)						
1100.000–1499.999 MHz	Triple superheterodyne (IF: 900–500.000001, 278.7, 46.35 MHz)						
1500.000-3000.000 MHz	Triple superheterodyne (IF: 1000–500, 278.7, 46.35 MHz)						
Sensitivity*1 (Preamp ON)	0.1– 1.799 MHz	1.8– 29.999 MHz	30- 1099.999 MHz	1100- 1999.999 MHz	2000– 3000 MHz		
SSB/CW/FSK (at 10 dB S/N)	-6 dBµ	–14 dBµ	–10 dBµ	–10 dBµ	–8 dBµ		
AM (at 10 dB S/N)	16 dBµ	8 dBµ	15 dBµ	15 dBµ	15 dBµ		
FM (at 12 dB SINAD)	-	-6 dBµ*2	–6 dBµ	–6 dBµ	–4 dBµ		
WFM (at 12 dB SINAD)	-	-		3 dBµ	5 dBµ		
D-STAR, NXDN, dPMR (1% BER)	-	-2 dBµ*2	–2 dBµ	–2 dBµ	0 dBµ		
P25 (5% BER)	-	-5 dBµ*2	−5 dBµ	−5 dBµ	–3 dBµ		
*1 BW: WFM=180 kHz, FM=15 kHz, AM=6 kHz, SSB/FSK=2.4 kHz, CW=0.5 kHz *2 28-29.999 MHz							
Selectivity	More than		Less than				
LSB/USB/FSK (BW: 2.4 KHz)	2.4 kH	z/–3 dB	3.6 kHz/–60 dB				
CW (BW: 500 Hz)	500 Hz	z/–3 dB	700 Hz/–60 dB				
AM (BW: 6 kHz)	6.0 kH	z/–3 dB	15.0 kHz/–60 dB				
FM (BW: 15 kHz)	12.0 kH	z/–6 dB	25.0 kHz/–60 dB				
WFM	180 kHz/–6 dB						
Spurious and image rejection	(Analog mode operation)						
0.010-29.999 MHz	More than 70 dB						
30.000–1099.999 MHz	More than 50 dB						
1100.000-2499.999 MHz	More than 40 dB*3						
2500.000-3000.000 MHz	2500.000–3000.000 MHz More than 40 dB*3						
*3 More than 35 dB for 1st IF through above 1100 MHz. More than 30 dB for 1st IF image above 2000 MHz.							
Audio output power More than 2.0 W (8 Ω load, 10% distortion)							

All stated specifications are subject to change without notice or obligation.

